

Мембранные клапаны GM

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93




GM High Vacuum Diaphragm Valve

Description: GM High vacuum diaphragm valve use valve rod to press rubber film directly on the valve seat, use to cut-off or connect Vacuum system.


GM High vacuum diaphragm valve use valve rod to press rubber film directly on the valve seat, use to cut-off or connect Vacuum system. Connection form as: Lap joint flange connection, fast unload flange connection, weld type connection. Weld type connection is divided into weld I type connection(both end weld), weld II type connection(one end weld, another end insert). Applicable medium can be air and noncorrosive gases.

Basic Dimensions


Applicable Scope(Pa)	$2 \times 10^5 \sim 1.3 \times 10^{-4}$
Valve Leak Rate(Pa.L/S)	$\leq 1.3 \times 10^{-6}$
Medium Temperature (°C)	-25 ~ +80(Seal Material: chemigum) -30 ~ +150(Seal Material: viton)
Install Position	arbitrary

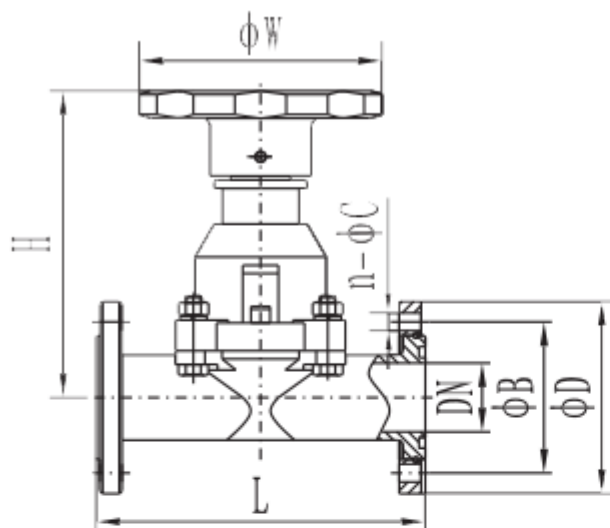

<Picture 1>

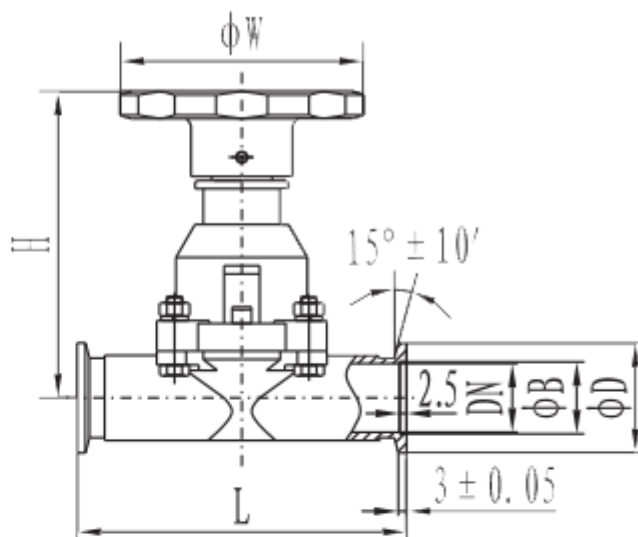

<Picture 2>

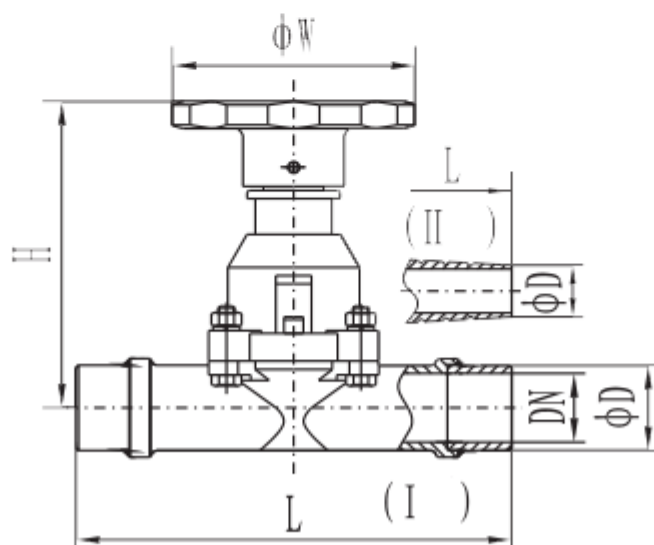

<Picture 3>

lap joint flange connection and overall Dimensions(mm)

model	diameter(DN)	ϕD	ϕB	ϕW	H	L	n- ϕC	Flange standard
GM-10	10	46	36	55	75	75	4- $\phi 6$	JB919
GM-25	25	70	55	90	115	120	4- $\phi 7$	GB/T6070
GM-40	40	100	80	100	132	150	4- $\phi 9$	
GM-50	50	110	90	100	157	180	4- $\phi 9$	

fast unload flange connection and overall Dimensions

model	diameter(DN)	ϕD	ϕB	ϕW	H	L	Flange standard
GM-10/KF	10	30	12.2	55	75	75	GB4892

GM-25/KF	25	40	26.2	90	115	100	
GM-40/KF	40	55	41.2	100	132	150	
GM-50/KF	50	75	52.2	100	157	180	/

weld type connection and overall Dimensions

model	diameter(DN)	ΦD	ΦW	H	L
GM-10-H(I)	10	19	55	75	150
GM-25H(I)	25	32	90	115	200
GM-40H(I)	40	45	100	132	240
GM-50H(I)	50	57	100	157	240
GM-10H(II)	10	9	55	75	150
GM-25H(II)	25	19	90	115	200

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93